


Adapters, flaps


JPA – adapter



- adapter for connecting JCA flap, JBR free flanges, JAE flexible couplings
- n = number of bolts (it is the same as the number of holes in other accessories)
- the thread is up to size 300 M6, up to size 560 M8, up to size 1250 M10

JPA	□ B	□ C	∅ D	n	∅ H
300	289	245	182	4	205
435	419	330	252	4	280
560	544	450	358	8	395
630	614	535	403	8	450
710	694	590	503	12	560
905	884	750	633	12	690
1,100	1,079	840	713	16	770
1,250	1,230	950	1,000	8	1,070


JCA – check flap

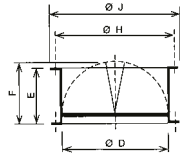

- self-weighting check flap for TH, CRV, CRH and HCT roof fans
- made of galvanized sheet steel

JCA	∅ D	E	F	∅ H	∅ J
300	182	170	113	205	219
435	252	170	148	280	300
560	358	230	201	395	415
630	403	250	224	450	474
710	503	300	274	560	581
905	633	360	339	690	714
1,100	713	380	379	770	794
1,250	1,004	560	560	1,070	1,110


JCM – check flap

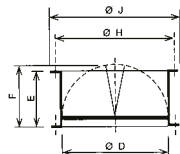

- check flap with preparation for servo drive (e.g. BELIMO) for TH, CRV, CRH and HCT roof fans
- from galvanized steel sheet
- the servo drive is not part of the delivery

JCM	∅ D	E	F	∅ H	∅ J
300	182	170	113	205	219
435	252	170	148	280	300
560	358	230	201	395	415
630	403	250	224	450	474
710	503	300	274	560	581
905	633	360	339	690	714
1,100	713	380	379	770	794
1,250	1,004	560	560	1,070	1,110

JBR – free flange

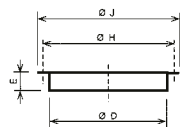

- free flange for TH, CRV, CRH and HCT roof fans
- from galvanized steel sheet

JBR	∅ D	E	∅ H	∅ J
300	182	55	205	219
435	252	55	280	300
560	358	55	395	415
630	403	63	450	474
710	503	69	560	581
905	633	69	690	714
1,100	713	69	770	794
1,250	1,004	105	1,070	1,110